



Quick Guide

For Rewinder:

RWG500



PN: 9001128 (B)

www.satoamerica.com

SATO America, Inc.

10350A Nations Ford Road
Charlotte, NC 28273
Main Phone: (704) 644.1650
Technical Support: (704) 644.1660
Technical Support Fax: (704) 644.1661
E-Mail: satosales@satoamerica.com
techsupport@satoamerica.com
www.satoamerica.com
Copyright 2010 SATO America, Inc.
All rights reserved

Introduction

Thank you for your purchase of the SATO RWG500 new generation rewinder for SATO barcode printers.

This quick reference guide will lead you on a familiarization tour to help you start using the machine as soon as possible.

To get the most out of the RWG500's intelligent features, be sure to read this manual carefully before using the machine.

Table of Contents

Introduction	1
Safety Symbols	2
Safety Precautions	
FCC Notice	
What's In the Box	
Parts Identification	7
Preparing the Joint Plate	9
Adjusting the Roller Height	
Installing the Joint Plate	14
Configuring the Rewinder	
Label Setup	19
Basic Operation	
Winding 7" labels	
Installing the 7" Expansion Kit	
Basic Specifications	

Safety Symbols

About warning symbols

As a preventive measure to ensure safe usage of this machine so as to safeguard against damage to yourself, other people or property, several symbols and icons are used in this guide. The following pages describe the significance of each symbol. Please take time to read and understand the content.

Warning	If this display and its warning is ignored, any mishandling could result in death or serious injuries.
<u></u> Caution	If this display and its warning is ignored, any mishandling could result in serious injuries as well as damage to properties.

Examples



↑ The triangle sign means 'Be careful'.

The content within the triangle illustrates specific hazards. In this case, the sign on the left means 'beware of electric shock'.



The circular sign means 'prohibited'. The content within the circle illustrates a specific prohibition. In this case the sign on the left means 'disassembly prohibited'.



The black circular sign means 'must do'. The content within the sign illustrates specific items that must be carried out. In this case the sign on the left means 'the plug must be unplugged from the socket'.

Safety Precautions

Warning	Do not place on an unstable place Do not place the rewinder on an unstable place such as an unsteady table, an inclined place or a place with vibration. The rewinder may drop or topple over and cause injuries.
∴ Caution	Liquids Do not place any containers with water or chemicals, such as flower vases or cups, as well as small metallic objects near the rewinder. Continued use creates the danger of fire or electrical shock. * If any of these should fall into the rewinder, immediately turn off the power and contact your SATO reseller or technical support center.
Marning	Foreign Matter Do not drop or insert metallic or flammable objects into the openings on the rewinder. Continued use creates the danger of fire or electrical shock. * If any of these should fall into the rewinder, immediately turn off the power and contact your SATO reseller or technical support center.
⚠ Caution	Dropping and Damage Do not use if the product has been dropped or damaged. Continued use creates the danger of fire and electrical shock. * Should the rewinder ever fall or otherwise become damaged, immediately turn off the power and contact your SATO reseller or technical support center. Continued use creates the danger of fire or electrical shock.

_	Abnormal Conditions		
/!\ Warning	Do not use the rewinder if it is emitting smoke or strange odors. Continued use creates the danger of fire and electrical shock.		
	* Immediately turn off the power and contact your SATO reseller or technical support center for repairs. Do not try to service the rewinder by yourself.		
^	Disassembly		
/!\ Caution	Never try to take the unit apart or modify it in any way. Doing so creates the danger of fire or electrical shock. Contact your SATO reseller or technical support center for repairs.		
^	Location		
<u>∕!</u> \ Warning	Do not locate the rewinder in areas subjected to high humidity or dew. Doing so creates the danger of electrical shock.		
	* If moisture forms inside the rewinder, immediately turn off the power and do not use it until it has dried up.		
Caution	FOR CONTINUED PROTECTION AGAINST RISK OF FIRE.		
	REPLACE WITH THE SAME TYPE AND RATING OF FUSE.		
	LOCATION: F1, F2 RATING: 125V 3.5A		


FC FCC Notice

The equipment referenced in this document complies with the requirements in Part 15 of FCC Rules for a Class B Computing Device. Operation of this equipment in a residential area may cause inacceptable interference to radio and TV reception. If the interference is unacceptable, you can reposition the equipment, which may improve reception.


What's In the Box



Parts Identification

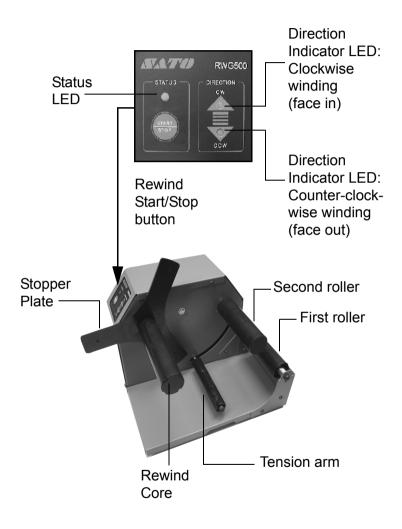

Parts Identification

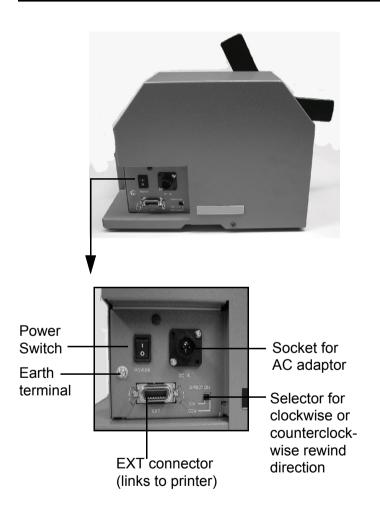

Preparing the Joint Plate

The joint plate aligns the base of the RWG500 to the base of a SATO printer. This alignment ensures a smooth label path and prevents problems during long periods of continuous operation.

The following procedure adjusts the joint plate to suit the base of different SATO printers, as described below.

Note: For TG3 Series, do not use Joint Plate.

1


Use a Phillips screwdriver to loosen the two screws that secure the movable portion of the joint plate.



Main plate

2

Slide the movable portion of the joint plate in various directions to reveal the names of various SATO printer models.






Preparing the Joint Plate (cont'd)

To prepare the joint plate for a **GT4XXe** or **M84Pro** series printers:


When the movable plate reveals "GT4XXe" and "M84Pro", adjust its position so that each protruding stub (called a boss) on the underside of the movable plate will fit neatly into one of two complementary holes on the main plate. The movable plate will not slide easily now. Tighten the two screws which were loosened in Step 1.

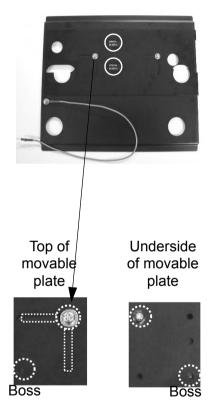

Preparing the Joint Plate (cont'd)

To prepare the joint plate for the M5900RVe printer:


When the movable plate reveals "M5900RVe", adjust its position so that each protruding stub (called a boss) on the underside of the movable plate will fit neatly into one of two complementary holes on the main plate. The movable plate will not slide easily now. Tighten the two screws which were loosened in Step 1.

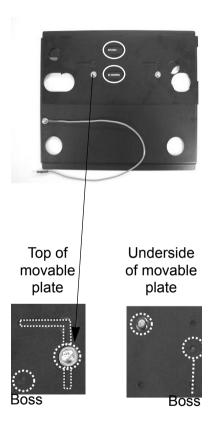

Preparing the Joint Plate (cont'd)

To prepare the joint plate for the **CL6XXe** series printers:

When the movable plate reveals "CL6XXe", adjust its position so that each protruding stub (called a boss) on the underside of the movable plate will fit neatly into one of two complementary holes on the main plate. The movable plate will not slide easily now. Tighten the two screws which were loosened in Step 1.

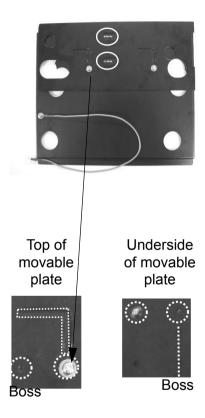


Adjusting the Roller Height

Before the rewinder is guided into place in front of the printer, the height of its first roller has to be adjusted to one of two positions (upper or lower) to fit the printer.

Roller Height settings for SATO Printers


Model	Roller Height
GT4XXe	Lower position
CL6XXe	Lower position
CL4XXe	Upper position
M84Pro	Upper position
M5900RVe	Upper position
TG3 Series	Lower position

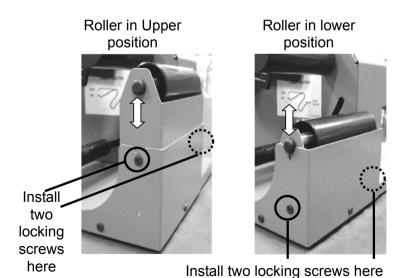

Installing the Joint Plate

To align the printer to the RWG500 using the joint plate:

Place the non-movable holes of the joint plate under the feet of the rewinder as shown. The holes of the movable plate should be facing away from the rewinder.

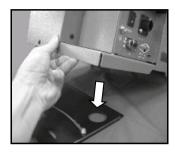

Connect the Frame
Ground wire of the joint
plate to the Earth terminal on the rewinder.
Use a Phillips screwdriver if necessary.




Earthing completed



Installing the Joint Plate (cont'd)

3

Now place the printer so that its feet at the label output side will fit into the positioning holes on the joint place.

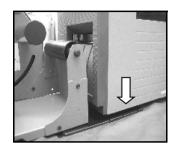

4

Make sure both the printer and the rewinder are turned OFF.
Locate the EXT connector of the printer and use the supplied EXT cable to connect the printer to the rewinder's EXT connector.





Make sure that the printer and rewinder are aligned properly using the joint plate. Otherwise rewinding errors may occur.



Configuring the Rewinder

This section shows how to configure the label rewinder for operation.

Choose the option identified below that best reflects the desired effects. Then, refer to the table that follows, to configure the label rewinder accordingly.

Rewind Mode 1

This is the standard operating mode as the rewinder is delivered from the factory.

Rewind Mode 2

This rewinding mode synchronizes rewinder operation with the feeding printer.

This setting allows the rewinder to cease operation when paper-end or ribbon-end is detected on the assigned printer.

Remains in a ready/standby state until the issue is resolved.

Configuring the Rewinder (cont'd)

Rewind Mode 3

This rewinding mode synchronizes rewinder operation with the feeding printer.

When the assigned printer goes offline, the label rewinder also ceases operation. The preceding sentence also applies to error conditions, as well as, paper-end and ribbon-end scenarios.

The printer can be switched between online and offline modes by pressing the appropriate keys on the label rewinder's operator panel.

Program Download

This setting permits the firmware to be over-written with a program downloaded from a host computer. To perform this function, connect a RS232C interface cable between the rewinder and a host computer. A connector is provided for this purpose.

The label rewinder must be powered off when setting the DIP switches, and then power on to initialize.

Configuring the Rewinder (cont'd)

DIP SWITCH CONFIGURATION						
FUNCTION	DSW 1	DSW 2	DSW 3	DSW 4	DSW 5	DSW 6
Rewind Mode 1	OFF	OFF	OFF	OFF	OFF	OFF
Rewind Mode 2	OFF	OFF	OFF	OFF	ON	OFF
Rewind Mode 3	ON	ON	OFF	OFF	ON	OFF
Program Download Mode	X	X	Х	X	X	ON

Label Setup

The RWG500 offers two rewind directions and two types of rewind shafts, as follows:Rewinding Direction: Face in (CW) / Face Out (CCRewinding Shaft: Direct rewind/3" paper core rewind

About Rewinding Direction

Counterclockwise winding (CCW)

Clockwise winding (CW)



CALLED TO THE PARTY OF THE PART


In a CCW winding direction, the printed surface of the label is always visible as it faces outwards.

In a CW winding direction, the printed surface of the label faces inwards and is hidden from view. Only the backing sheet (label liner) faces outwards. The rewind is set by default to CW rewinding.

To change the rewind direction, use the Direction switch found on the side panel of the rewinder. The factory setting is CW rewinding by default.

Setting Rewind Direction

- Before changing the rewind direction, make sure the rewinder is turned OFF, or make sure that the Status LED is blinking in green (rewinder in Idling state)
- Locate the Direction switch at the side panel, and set it to either CW (clockwise, face in) or CCW (counterclockwise, face-out).
- 3. Check the control panel display to confirm that the appropriate CW or CCW LED is lit.

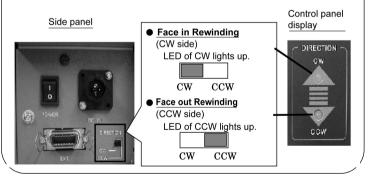




Change the rewind direction only when the rewinder is in an idling state, or when it is turned OFF.

Besides setting the rewind direction, you can set up the rewinder for direct rewinding or rewinding using a 3" paper core.

About Direct Rewinding

Use direct rewinding when a paper core is not to be used, and the label being collected will not need reprinting or reprocessing in future.

- 1
- Set the rewinder for CW or CCW rewind direction and load the label accordingly. Wind the label at the rewinding shaft, and insert the provided label clip to fasten the label onto the shaft.

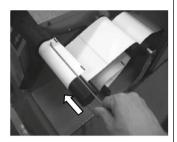

2

Now insert the label guide. The label output from the printer is now set for direct rewinding.




You can collect output labels onto a 3" paper core for more consistent winding, and if the wound label needs to be unwound later for reprocessing/reprinting.

Rewinding on a 3" paper core



If label width is below 65 mm, attach one of the provided 3" core adaptors to the rewinding shaft. Otherwise, use two adaptors. The adaptor(s) should be inserted so that

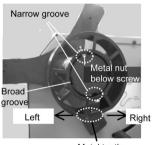


Metal teeth (for fixing the paper tube)

the metal plate teeth faces in the same direction* as the rewind direction. Screw the adaptor(s) into the narrow groove of the shaft.

* For CW and CCW rewinding, the metal teeth must face left or right respectively.



Space the adaptor(s) along the shaft to fit the label width, then tighten each locking screw. Make sure the screw fits into the metal nut sliding along the groove. Screw holes

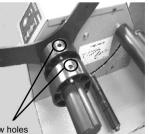

After properly inserting the 3" core adaptor(s), follow the steps below to install the label.




Insert the 3" paper tube core into the rewind shaft. Affix the leading (front) portion of the output label to the paper core with some adhesive tape.





Finally, insert the label guide.

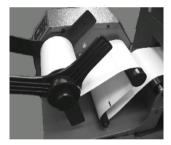



Caution

Before installing any label, always make sure that the rewinder is OFF, or in an idling state (Status LED blinks green).

Basic Operation


After setting up the rewinder to work with your SATO printer, rewinding can be performed.



Turn on the rewinder. Wait for the status LED on the control panel to start blinking in green. The rewinder is now in idling status—ready to collect labels from the printer.



Press and hold down the START/STOP button on the rewinder control panel. The rewind shaft starts rotating, and the tension arm rises and stops automatically. This process takes up any slack in the label path.

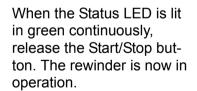

If you release the Start/Stop button before the Status LED lights up continuously in green, repeat Step 1.






Basic Operation (cont'd)



Start the automatic rewinding by printing labels on the printer. Each time a label is printed, the rewinder automatically winds it outwards and takes up any slack in the winding process.



When the rewinding is completed, press the START/STOP button on the rewinder's control panel. The tension arm comes to rest and stops automatically. The Status LED blinks in green to signal the rewinder's **idling status**.

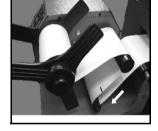




Remove the label on the printer, and then remove the wound label on the rewinder. The wound label can be removed easily because the tension arm is inactive.

Winding 7" labels

To wind labels wider than 131 mm, the optional 7" Expansion Kit is required. The kit consists of the following:

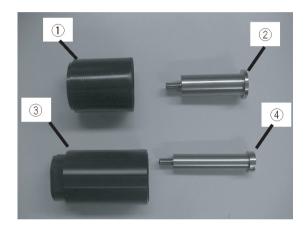

- 1 Second roller joint
- ② Second roller shaft guide
- 3 Core joint
- (4) Core shaft guide

Installing the 7" Expansion Kit


Follow the steps below to install the Expansion Kit.



Remove the cap covering the second roller of the rewinder.



Insert the kit's second-roller joint and second-roller shaft guide. Tighten the shaft guide in a counterclockwise direction using a screwdriver.

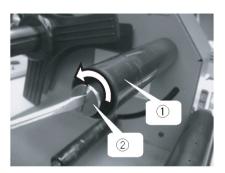

Reattach the сар.




Installing the 7" Expansion Kit (cont'd)



Remove the cap covering the rewinding shaft of the rewinder.



Insert the core joint and core shaft guide.
Tighten the shaft guide in a counterclockwise direction using a screwdriver.

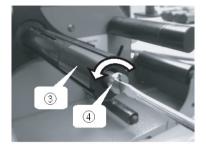

6

Reattach the cap to complete installation of the expansion kit.



Basic Specifications

Rewinding method	Ø 38.1 mm direct rewinding 3" paper core rewinding		
Paper type	Supports all genuine SATO labels printed on SATO printers, except linerless labels		
Paper width	Width: 25–131 mm (standard) Width: 25–180 mm w/optional expansion kit. Label thickness: 0.08–0.26 mm		
Winding direction (selectable)	Default setting: Face in (CW) Face out (CCW) Note: Rewind direction must match the winding direction of the label produced from the printer.		
Rewind speed	Auto speed setting, up to max of 381mm/s		
Rewind monitoring	Tension arm detects paper slack, paper presence and incoming paper speed		
Power Supply	DC25V	Power tapped from SATO printer's EXT port	
External diameter	Width (W) 280 mm Depth (D) 320 mm Height (H) 230 mm		
Weight	7.5kg		